





Start

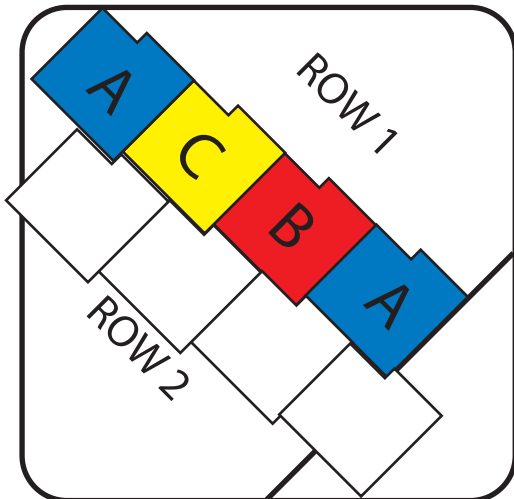

Start with either tool A/B/C from joint line and/or edge of form.

\*Tips: Have enough tools to span your project all the way to the other end plus two more to start the next row


Next row to finish

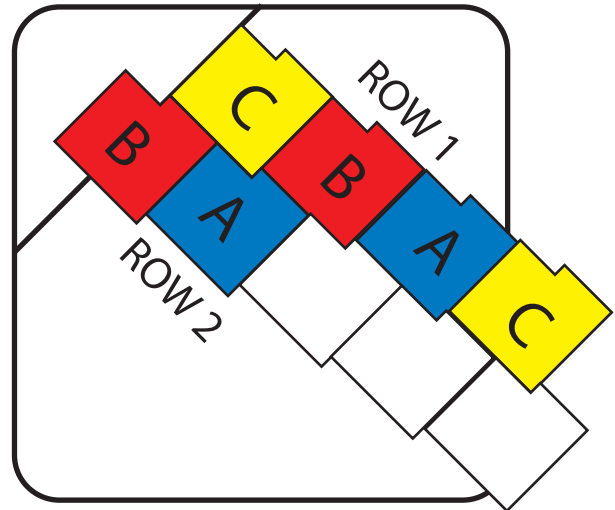


Start a new row on top and/or bottom of the first row continuing the interlocking pattern continue this till the end of the project.

\*Tips: Avoid putting the same tool twice in the same row

Traditional

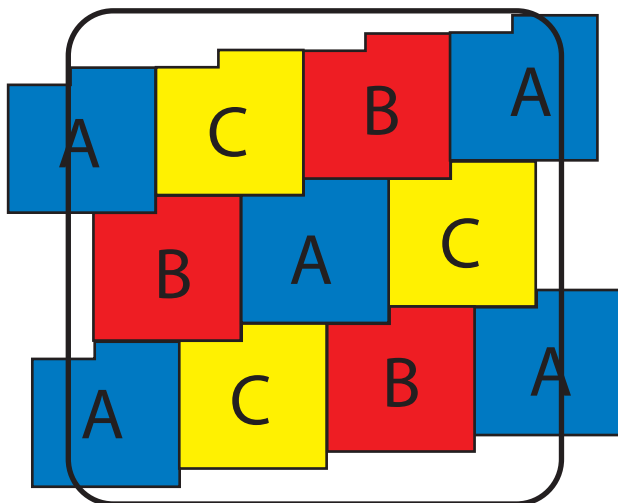

Mixed for best results

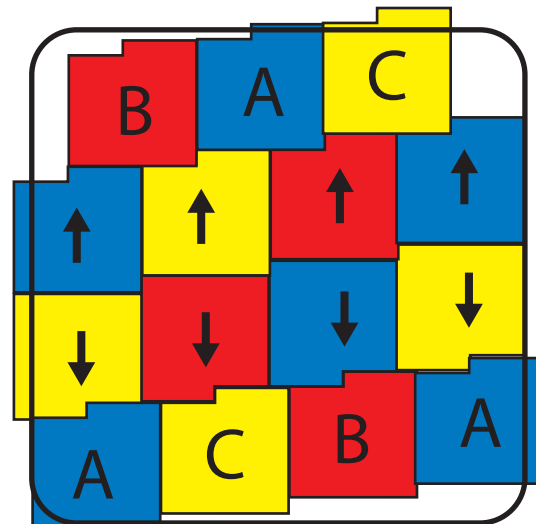

\*Tips: Use our flex tool and/or the the super flex tool for up against walls or objects