
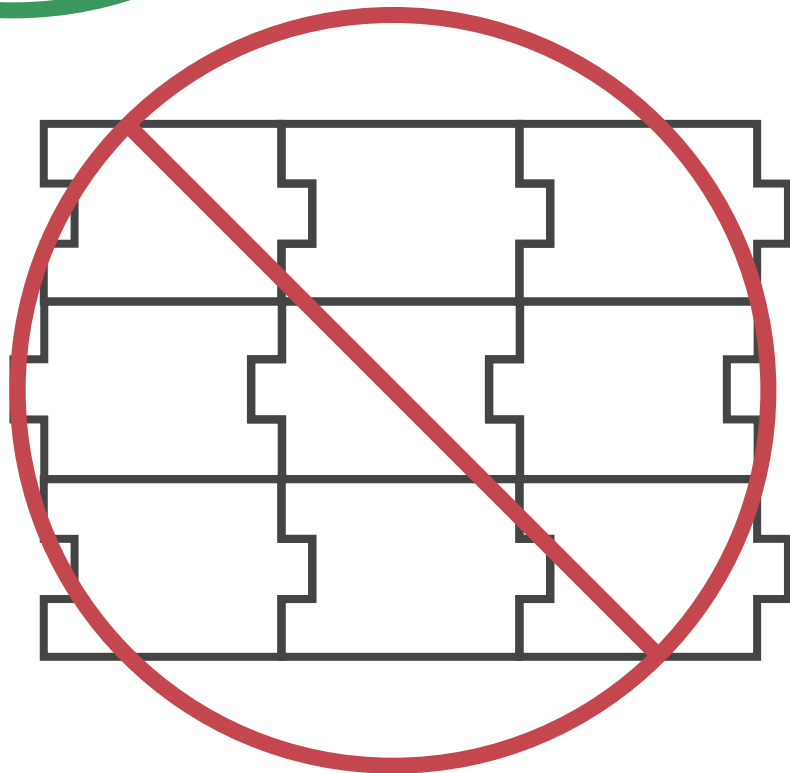


# Cobble Stone Placement Guide

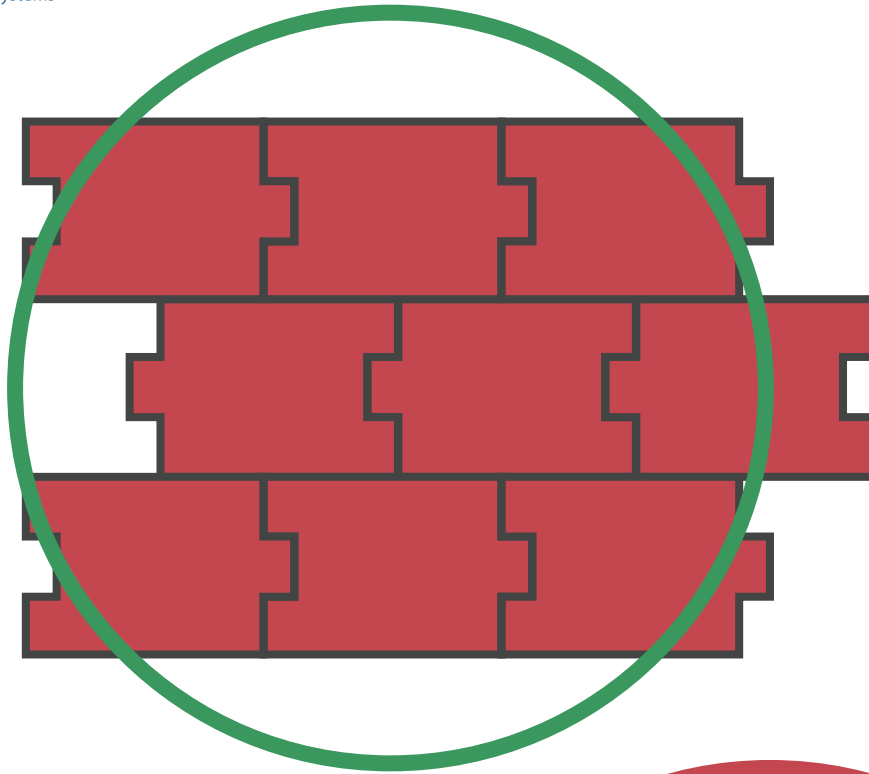

\*Tips: Use touch-up skins along forms and walls to pretexture before stamping

[prolinestamps.com](http://prolinestamps.com)

TEL: 1-800-795-4750 Toll free